

How to monitor the GSM antenna level by script?

You need to create a Tag like following:

- IOServer: eWON
- Topic: SYS
- Address: GSM_LEV

For an optimal use, this signal range must be between 20 and 31 (signal levels lower than 18 will work, but the communications could be slower or even interrupted).

Check your local environment and your antenna isolation/power if you get a 0 or a 99.

- Note -

The value of this tag is updated only every minute and ONLY when the modem is not in communication. That means if you are permanently connected in GPRS, the GSM_LEV tag will be never updated



Revision

Revision History

Revision Level	Date	Description
1.0	09/02/2010	Creation of document

Document build number: 2

Note concerning the warranty and the rights of ownership:

The information contained in this document is subject to modification without notice. Check <http://wiki.ewon.biz> for the latest documents releases.

The vendor and the authors of this manual are not liable for the errors it may contain, nor for their eventual consequences.

No liability or warranty, explicit or implicit, is made concerning the quality, the accuracy and the correctness of the information contained in this document. In no case the manufacturer's responsibility could be called for direct, indirect, accidental or other damage occurring from any defect of the product or errors coming from this document.

The product names are mentioned in this manual for information purposes only. The trade marks and the product names or marks contained in this document are the property of their respective owners.

This document contains materials protected by the International Copyright Laws. All reproduction rights are reserved. No part of this handbook can be reproduced, transmitted or copied in any way without written consent from the manufacturer and/or the authors of this handbook.

eWON sa, Member of ACT'L Group